


Turn Fin Mounting Instructions

The method of mounting is very simple. Follow the diagram below for the placement of the bracket and fin. Mark where the bolt/screw will go and then drill a slightly undersized hole. You can use the bolt provided and carefully 'thread' it into the fiberglass. Then remove the bolt, position the bracket and reinstall the bolt using epoxy on the bolt and in the hole. Alternatively, you can use a sheet metal screw (not provided) The sheet metal screw may provide a more secure mounting.

The goal is for the carbon fin to be exactly aligned with the inside of the sponson and the bracket far enough up as to not interfere with the flow of water past the sponson.

Rear of right sponson

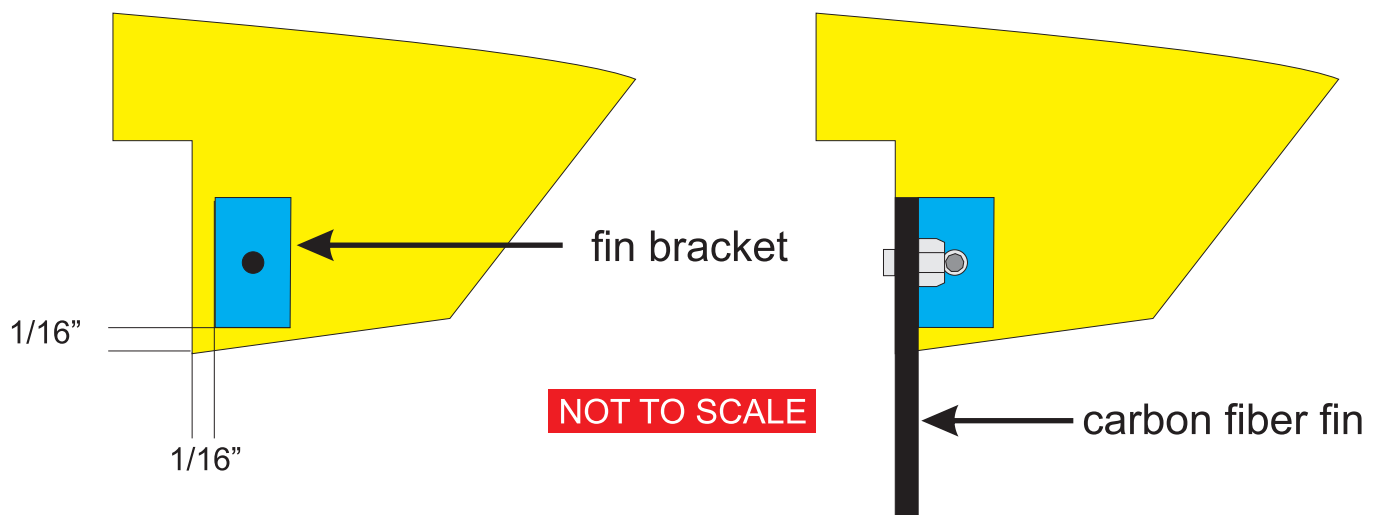

1. Remove the carbon fiber fin from the mounting bracket
2. position the fin bracket 1/16" from the inside edge of the sponson and 1/16" from the bottom of the sponson.
3. Mark the mounting hole position. Remove the bracket.
4. Drill a slightly undersized hole. Thread the bolt provided into the hole.
Reposition the bracket.
5. Apply some epoxy to the bolt and insert the bolt. 6.
Position the bracket to be exactly parallel with the inside edge of the sponson.
6. Re-install the carbon fiber turn fin.